

**Kramer Electronics, Ltd.**



# **USER MANUAL**

**Model:**

**VM-114H4C**

***2 Input 1:4 HDMI DA/4x CAT5 Outputs***

## Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
<b>2</b>	<b>Getting Started</b>	<b>1</b>
2.1	Recycling Kramer Products	1
2.2	Quick Start	2
<b>3</b>	<b>Overview</b>	<b>4</b>
3.1	Using Shielded Twisted Pair Cable	4
3.2	About the Power Connect™ Feature	5
3.3	Recommendations for Best Performance	5
<b>4</b>	<b>Defining the VM-114H4C</b>	<b>6</b>
<b>5</b>	<b>Using the VM-114H4C</b>	<b>7</b>
5.1	Connecting the VM-114H4C	7
5.2	Acquiring the EDID	8
5.2.1	Disabling/Enabling Deep Color Support	9
5.3	Connecting to the VM-114H4C via RS-232	9
5.4	RS-232, IR Control and Pass-through	10
5.4.1	RS-232 Control and Pass-through Using the VM-114H4C	10
5.4.2	Local IR Control and IR Pass-through Using the VM-114H4C	10
<b>6</b>	<b>Wiring the Twisted Pair RJ-45 Connectors</b>	<b>14</b>
<b>7</b>	<b>Technical Specifications</b>	<b>15</b>
<b>8</b>	<b>Default Communication Parameters</b>	<b>15</b>
<b>9</b>	<b>Default EDID</b>	<b>16</b>
<b>10</b>	<b>Kramer Protocol 2000</b>	<b>16</b>

## Figures

Figure 1: VM-114H4C Front Panel	6
Figure 2: VM-114H4C Rear Panel	7
Figure 3: Connecting the VM-114H4C	8
Figure 4: VM-114H4C RS-232 Control and Pass-through	10
Figure 5: VM-114H4C IR Control and Pass-through Example One	11
Figure 6: VM-114H4C IR Control and Pass-through Example Two	12
Figure 7: VM-114H4C IR Control and Pass-through Example Three	13
Figure 8: TP Pinout Wiring	14

**Tables**

Table 1: VM-114H4C Front Panel Features	6
Table 2: VM-114H4C Rear Panel Features	7
Table 3: Technical Specifications of the VM-114H4C	15
Table 4: Default Communication Parameters	15
Table 5: Protocol Definitions	16
Table 6: Instruction Codes for Protocol 2000	17

## 1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 1,000-plus different models now appear in 11 groups<sup>1</sup> that are clearly defined by function.

Congratulations on purchasing your Kramer Desktop **VM-114H4C**, which is ideal for:

- Home theater, presentation and multimedia applications
- Rental and staging

The package includes the following items:

- **VM-114H4C** 2 *Input 1:4 HDMI DA/4x CAT5 Outputs*
- Power adapter (12V DC)
- Kramer **RC-IR3** infrared remote control transmitter (including the required batteries and a separate user manual<sup>2</sup>)
- This user manual<sup>2</sup>

## 2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables<sup>3</sup>
- Do not secure the cables in tight bundles or roll the slack into tight coils

### 2.1 Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced

---

1 GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Routers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Products

2 Download up-to-date Kramer user manuals from <http://www.kramerelectronics.com>


3 The complete list of Kramer cables is available from <http://www.kramerelectronics.com>

Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at <http://www.kramerelectronics.com/support/recycling/>.

## **2.2 Quick Start**

This quick start chart summarizes the basic setup and operation steps of the **VM-114H4C**.

### Step 1: Connect the inputs and outputs - see Section 5

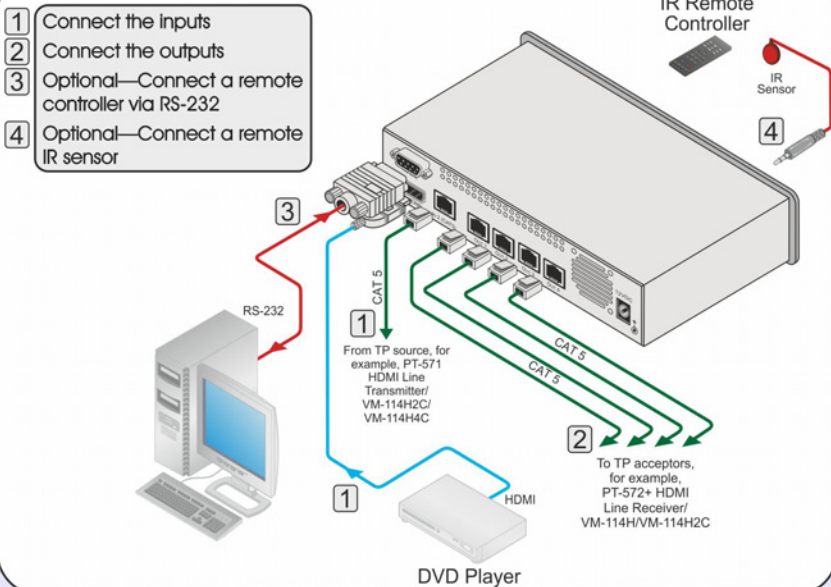

### Step 2: Connect the power adapter to the unit and the mains supply

### Step 3: If required, acquire the EDID - see Section 5.2

- Press and hold EDID Select to cycle through 1, 2, 3, 4, Default or Auto-mix
- When you reach the required EDID output, press the EDID READ button to acquire the EDID

This is usually done only once when the machine is being set up in an installation. Once acquired, the EDID is saved in non-volatile memory and further changes are not necessary

### 3 Overview

The high quality **VM-114H4C** is a switcher/distribution amplifier for HDMI and TP (Twisted Pair) signals. It reclocks and equalizes one of two selectable input signals and distributes it to four TP outputs.

In particular, the **VM-114H4C**:

- Supports up to 1.65Gbps bandwidth per graphic channel (DGKat)<sup>1</sup>
- Can read and store in non-volatile memory the default EDID or the EDID<sup>2</sup> block from one or a mix<sup>3</sup> of the output display devices, so it can then provide the EDID information to the source even if the display device is not connected
- Features I-EDIDPro™ Kramer Intelligent EDID Processing™ – Intelligent EDID handling & processing algorithm ensures Plug and Play operation for HDMI systems
- Supports 3D Pass-through, Deep Color<sup>4</sup>, x.v.Color™ and uncompressed audio channels (Dolby TrueHD, DTS-HD)
- Is HDCP compliant
- Features LEDs indicating the selected input and active output
- Supports IR remote control and has a remote IR 3.5mm mini jack
- Is 12V DC fed and is housed in a Kramer Desktop enclosure

#### 3.1 Using Shielded Twisted Pair Cable

Kramer engineers have developed special twisted pair cables to best match our digital twisted pair products; the Kramer: **BC-DGKat524** (CAT 5 24 AWG), the Kramer **BC-DGKat623** (CAT 6 23 AWG cable), and the Kramer **BC-DGKat7a23** (CAT 7a 23 AWG cable). These specially built cables significantly outperform regular CAT 5/CAT 6 /CAT 7a cables.

The **VM-114H4C** supports a range of up to 90m (295ft) at 1080i/SXGA or up to 30m (98ft) at 1080p/UXGA on shielded **BCP-DGKat524** cable; 90m (295ft) at 1080i or up to 70m (230ft) at 1080p/UXGA on shielded **BCP-DGKat623** cable.

You can daisy-chain up to six devices with the maximum overall distance between the first and last devices being cumulative and limited by the cable type used.

---

1 Suitable for resolutions up to UXGA at 60Hz and for all HD resolutions

2 EDID is Extended Display Identification Data (see [Section 3.4](#) for a more detailed definition)

3 The EDID acquired is a weighted average of all the connected outputs. For example, if several displays with different resolutions are connected to the outputs, the acquired EDID supports all the resolutions, as well as other parameters included in the EDID

4 On the HDMI input

### 3.2 About the Power Connect™ Feature

The Power Connect™ feature here means that only the transmitter needs to be connected to a power source when the devices are within 90m (270ft) of each other. The Power Connect™ feature applies as long as the cable can carry power and the distance does not exceed 90m on standard CAT 5 cable. For longer distances, heavier gauge cable should be used<sup>1</sup>.




**Warning:** Using a TP cable that is incorrectly wired will cause permanent damage to the device

### 3.3 Recommendations for Best Performance

To achieve the best performance:

- Connect only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Do not secure the cables in tight bundles or roll the slack into tight coils
- Avoid interference from neighboring electrical appliances and position your **VM-114H4C** away from moisture, excessive sunlight and dust

	<b>Caution:</b> No operator serviceable parts inside unit
	<b>Warning:</b> Use only the Kramer Electronics input power wall adapter that is provided with the unit
	<b>Warning:</b> Disconnect power and unplug unit from wall before installing or removing the device or servicing unit


---

<sup>1</sup> CAT 5 cable is still suitable for the video/audio transmission, but not for feeding the power at these distances



## 4 Defining the VM-114H4C

[Figure 1](#) and [Table 1](#) define the front panel the **VM-114H4C**.

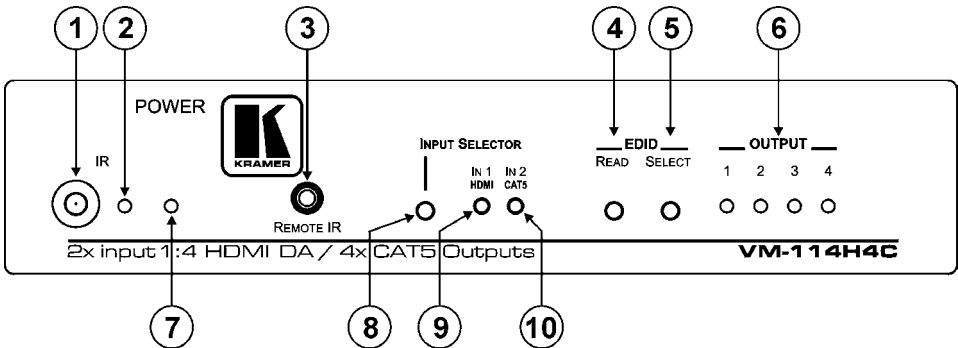

*Figure 1: VM-114H4C Front Panel*

*Table 1: VM-114H4C Front Panel Features*

#	Feature		Function
1	IR Remote Control Sensor		Sensor for the remote control IR transmitter
2	IR LED		Lights yellow when receiving signals from the IR remote control transmitter
3	REMOTE IR 3.5mm Mini Jack		Connect to a remote infrared sensor
4	EDID Buttons	READ Button	Press (when one of the input LEDs is flashing to indicate a selected input) to read the selected EDID (see <a href="#">Section 5.2</a> )
5		SELECT Button	Press repeatedly to cycle through the inputs to select an input from which to read the EDID. The relevant LED flashes (see <a href="#">Section 5.2</a> )
6	OUTPUT 1~4 LEDs		The relevant LED lights green when an acceptor is connected to the output <sup>1</sup>
7	POWER LED		Lights green when the unit receives power
8	INPUT SELECTOR Button		Press to select an input. The relevant input LED lights
9	IN1 (HDMI) LED	Input LEDs	Lights green when HDMI input 1 is selected
10	IN2 (CAT5) LED		Lights green when the TP input 2 is selected

<sup>1</sup> Also lights or flashes during EDID setup (see [Section 5.2](#))

[Figure 2](#) and [Table 2](#) define the rear panel **VM-114H4C**.

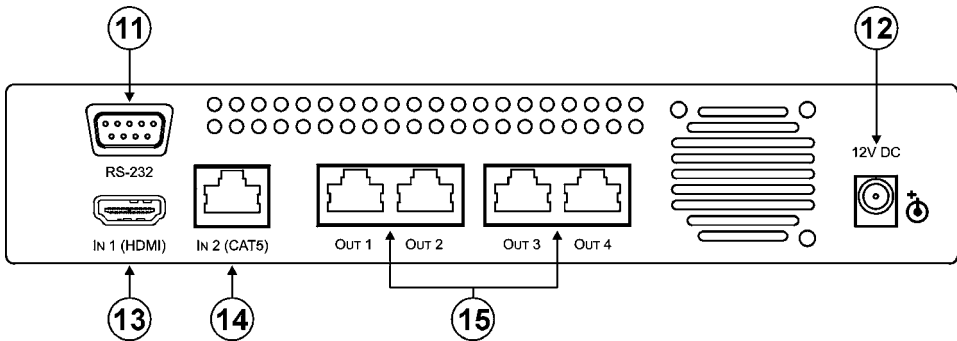


Figure 2: VM-114H4C Rear Panel

Table 2: VM-114H4C Rear Panel Features

#	Feature		Function
11	RS-232 9-pin D-sub (F) Connector		Connect to a PC or remote controller
12	12V DC Power Connector		Connect to the +12V DC power adapter, center pin positive
13	IN1 (HDMI) Input HDMI Connector	Inputs	Connect to an HDMI source
14	IN2 (CAT5) Input RJ-45 Connector		Connect to a TP source (for example, PT-571 HDMI Line Transmitter, VM-114H2C or VM-114H4C)
15	OUT 1		Connect to the TP acceptors (for example, PT-572+ HDMI Line Receiver, VM-114H or VM-114H4C)
	OUT 2		
	OUT 3		
	OUT 4		

## 5 Using the VM-114H4C

This section describes how to connect the **VM-114H4C** (see [Section 5.1](#)) and how to use the EDID SELECT button (see [Section 5.2](#)).

### 5.1 Connecting the VM-114H4C

To connect<sup>1</sup> the **VM-114H4C** as illustrated in the example in [Figure 3](#):

1. Connect the HDMI source (for example, a DVD player) to the IN 1 (HDMI) connector.
2. Connect the TP source (for example, a **PT-571 HDMI Line Transmitter**<sup>2</sup>, another **VM-114H2C** or a **VM-1114H4C**) to the IN 2 (CAT5) connector.

<sup>1</sup> Switch off the power on each device before connecting it to your VM-114H4C. After connecting your VM-114H4C, switch on its power and then switch on the power on each device

<sup>2</sup> Another example is the TP-573 Twisted Pair Line Transmitter

3. Connect the TP RJ-45 outputs to up to four TP acceptors (for example, the **PT-572+ Line Receiver**<sup>1</sup>, the **VM-114H** or the **VM-114H2C**).
4. (Optional) Connect the front panel remote IR 3.5mm mini jack to the remote IR sensor.
5. (Optional) Connect a PC via RS-232 to the RS-232 port on the **VM-114H4C** (see [Section 5.3](#)).

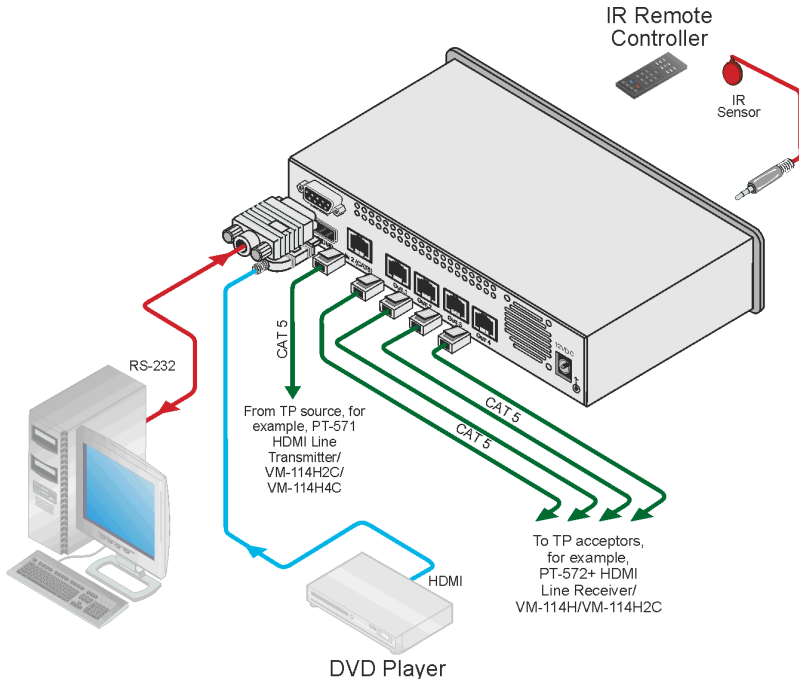


Figure 3: Connecting the VM-114H4C

## 5.2 Acquiring the EDID

Each input on the **VM-114H4C** has a factory default EDID loaded<sup>2</sup> (see [Section 9](#)). This lets you connect the power before having to connect one of the acceptors.

You can acquire the EDID<sup>3</sup> from:

- One output (the relevant output LED flashes)

<sup>1</sup> Alternatively the TP-574 Twisted Pair Line Receiver

<sup>2</sup> The VM-114H4C reads the EDID, which is stored in the non-volatile memory

<sup>3</sup> This is usually done only once, when the machine is being set up in an installation. Once acquired, the EDID is saved in non-volatile memory and further acquisition is not necessary

- The default EDID (all output LEDs flash)
- Up to four connected outputs using the Auto-mix Mode<sup>1</sup> (all output LEDs light)

#### **To acquire the EDID:**

1. Connect the output(s) from which you want to acquire the EDID.
2. Press the EDID SELECT button briefly. The last acquired EDID is indicated by the lit LED (for example, if Output LED 2 is lit, the EDID acquired was from Output 2).  
The device enters the EDID programming mode.
3. Press the EDID SELECT button repeatedly until the required EDID is indicated based on the patterns described above.
4. Press the EDID READ button.  
The relevant LEDs flash in a pattern for a few seconds as follows:
  - Slowly and then no longer lights. The EDID was successfully read
  - Quickly and then no longer lights. The EDID was not read and the default EDID was stored

### **5.2.1 Disabling/Enabling Deep Color Support**

You can disable EDID deep color support to prevent signal deterioration when using long twisted pair cables on INPUT 2.

To disable deep color and acquire EDID:

1. Disconnect the power.
2. Connect the output or outputs from which you want to acquire the EDID.
3. Connect the power while pressing the EDID READ button.
4. Perform steps 3 through 5 in [Section 5.2](#).

To enable deep color and acquire EDID:

1. Disconnect the power.
2. Connect the output or outputs from which you want to acquire the EDID.
3. Connect the power while pressing the EDID SELECT button.
4. Perform steps 3 through 5 in [Section 5.2](#).

### **5.3 Connecting to the VM-114H4C via RS-232**

You can connect to the **VM-114H4C** via an RS-232 connection using, for example, a PC. Note that a null-modem adapter/connection is not required.

---

<sup>1</sup> The EDID acquired is a weighted average of all the connected outputs. For example, if several displays with different resolutions are connected to the outputs, the acquired EDID supports all the resolutions, as well as other parameters included in the EDID

**To connect to the VM-114H4C via RS-232:**

- Connect the RS-232 9-pin D-sub rear panel port on the product unit via a 9-wire straight cable (only pin 2 to pin 2, pin 3 to pin 3, and pin 5 to pin 5 need to be connected) to the RS-232 9-pin D-sub port on your PC


**5.4 RS-232, IR Control and Pass-through**

The **VM-114H4C** can be controlled via RS-232 and infrared. Depending on how the RS-232 and IR connections are configured dictates whether the device will respond to control signals or transparently pass them through to another receiver or transmitter. Three examples in [Sections 5.4.2.1](#), [5.4.2.2](#) and [5.4.2.3](#) of various configurations illustrate this functionality.

**5.4.1 RS-232 Control and Pass-through Using the VM-114H4C**

As shown in [Figure 3](#), you can connect a PC (or other serial controller) directly to the **VM-114H4C** to control the **VM-114H4C**.

The **VM-114H4C** also transparently passes bidirectional RS-232 signals over the CAT 5 cable from the **TP-573** transmitter to the **TP-574** receiver. For example, a PC connected to the RS-232 port on the **TP-573** can control an RS-232-controllable device (for example, a projection screen) connected to the **TP-574**.

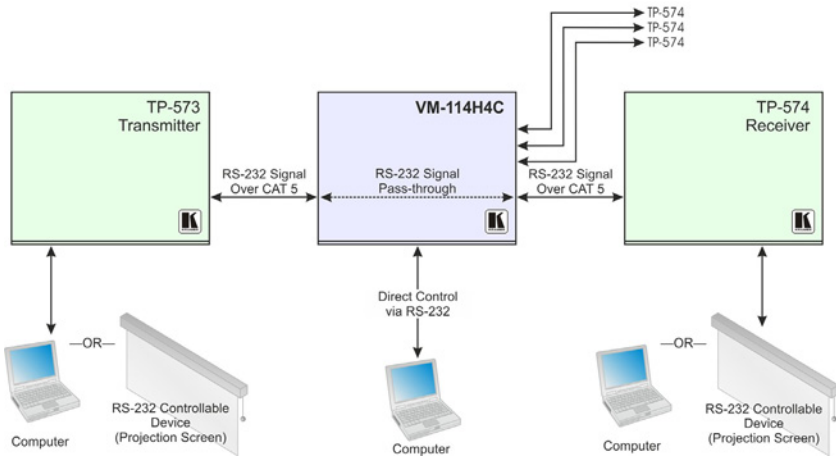

*Figure 4: VM-114H4C RS-232 Control and Pass-through*

**5.4.2 Local IR Control and IR Pass-through Using the VM-114H4C**

The **VM-114H4C** provides an IR sensor and a 3.5mm mini jack for connecting a remote IR emitter or sensor. When the **VM-114H4C** is connected to suitable transmitters and receivers (for example, the **TP-573** and **TP-574**), the **VM-114H4C** can act as a pass-through for IR control signals, allowing remote control of multiple devices using multiple IR remote controllers.

When there is no IR sensor or emitter connected to the IR Remote 3.5mm mini jack, all signals received by the IR sensor on the front panel are passed to the transmitter and receiver bi-directionally over the CAT 5 cable allowing control of remote devices.


When an IR sensor or emitter is connected to the IR Remote 3.5mm mini jack, the connection between the IR sensor on the front panel and the IR on the transmitter/receiver is broken so that any signal received by the IR sensor on the front panel remains local to the **VM-114H4C** and controls only the **VM-114H4C**.

To control any device you need to use the appropriate IR remote controller, for example, the Kramer remote controller controls Kramer devices, the LCD remote controller controls the LCD display and so on, as shown in the following examples.

The following examples illustrate just three of the possible ways of connecting the **VM-114H4C** to provide local and remote IR control.

#### 5.4.2.1 IR Local Control and Pass-through Example One

The configuration is shown in [Figure 5](#).

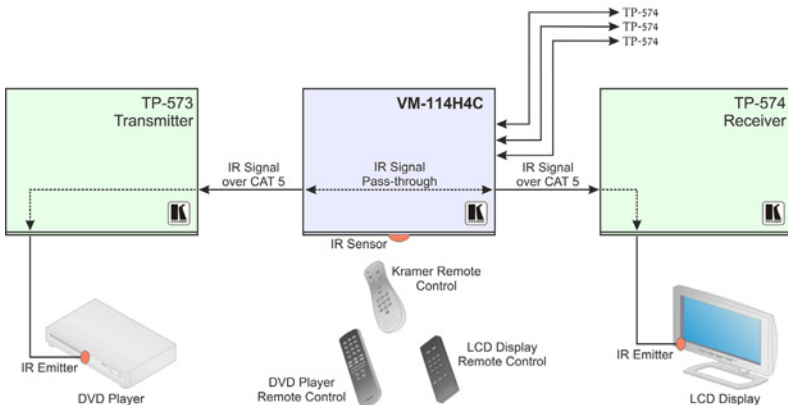

*Figure 5: VM-114H4C IR Control and Pass-through Example One*

A DVD player is connected to the **TP-573** transmitter via an IR emitter.


An LCD display is connected to the **TP-574** receiver via an IR emitter.

Both the **TP-573** and the **TP-574** are connected to the **VM-114H4C** via TP cabling.

Point the appropriate remote control for the device at the **VM-114H4C** IR sensor to control a device.

#### 5.4.2.2 IR Local Control and Pass-through Example Two


The configuration is shown in [Figure 6](#).

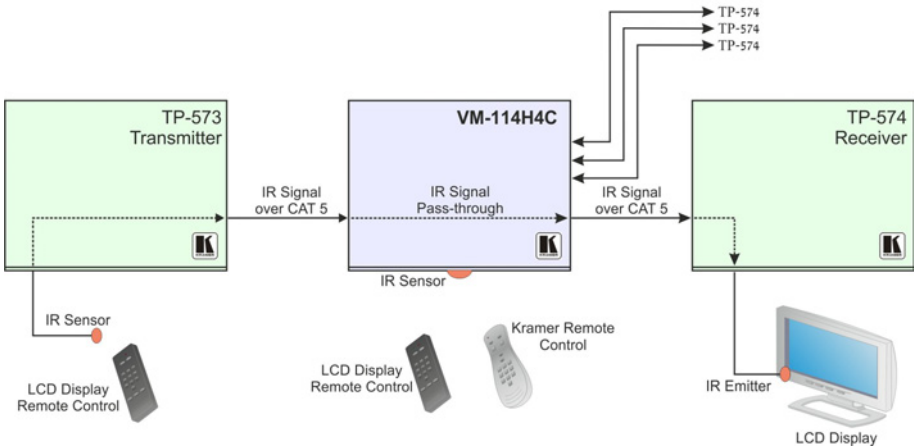

Point the LCD display remote control either at the **TP-573** IR sensor or at the **VM-114H4C** IR sensor to control the LCD display. Point the Kramer remote control at the **VM-114H4C** IR sensor to control the **VM-114H4C**.

### 5.4.2.3 IR Local Control and Pass-through Example Three

The configuration is shown in [Figure 7](#).

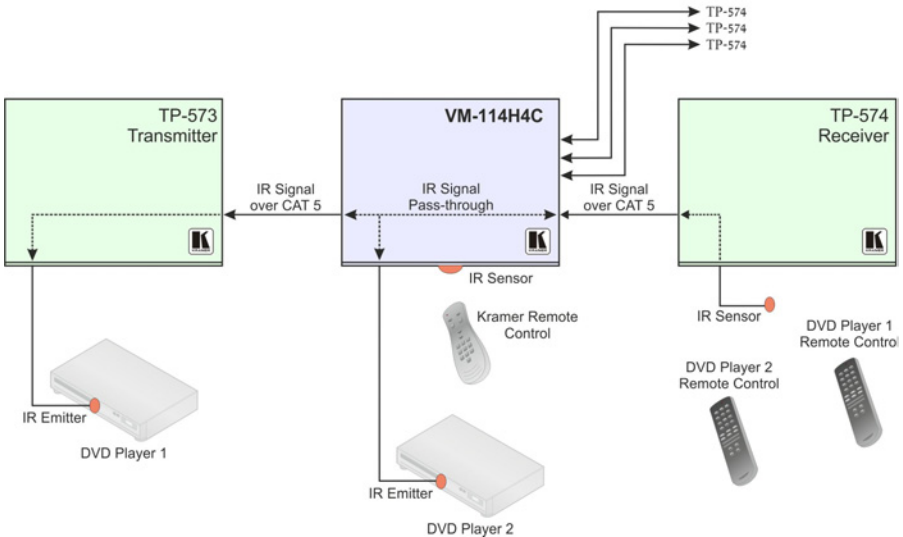

*Figure 7: VM-114H4C IR Control and Pass-through Example Three*

The first DVD player (player 1) is connected to the **TP-573** transmitter via an IR emitter.

The second DVD player (player 2) is connected to the **VM-114H4C** via an IR emitter.

An IR sensor is connected to the **TP-574** receiver.

Both the **TP-573** and the **TP-574** are connected to the **VM-114H4C** via TP cabling.

To control DVD player 1, point the DVD player 1 IR remote control at the **TP-574** IR sensor. To control DVD player 2, point the DVD player 2 IR remote control at the **TP-574** IR sensor. Point the Kramer remote control at the **VM-114H4C** IR sensor to control the **VM-114H4C**.



## 6 Wiring the Twisted Pair RJ-45 Connectors


This section defines the TP pinout, using a straight pin-to-pin cable with RJ-45 connectors.



Note, that the cable Ground shielding must be connected/soldered to the connector shield.

EIA /TIA 568B	
PIN	Wire Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown
Pair 1	4 and 5
Pair 2	1 and 2
Pair 3	3 and 6
Pair 4	7 and 8

*Figure 8: TP Pinout Wiring*

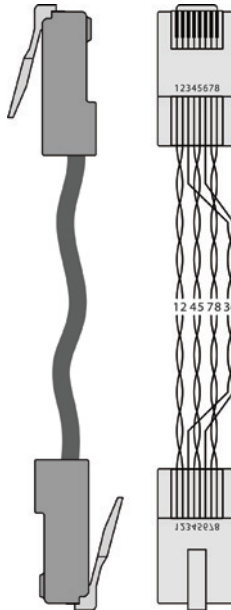

## 7 Technical Specifications

[Table 3](#) lists the technical specifications<sup>1</sup> of the **VM-114H4C**.

*Table 3: Technical Specifications of the VM-114H4C*

INPUTS:	1 HDMI Connector 1 TP on an RJ-45 Connector
OUTPUTS:	4 TP on RJ-45 Connectors
BANDWIDTH:	Supports up to 1.65Gbps bandwidth per graphic channel (DGKat)
COMPLIANCE WITH HDMI STANDARD:	Supports HDMI and HDCP
CONTROLS:	Input select button, EDID select button, panel lock button, RS-232, local and remote IR controls
INDICATOR LEDs:	IR communication, Power, IN 1 HDMI, IN 2 CAT5, OUTPUT 1, 2, 3 and 4
POWER CONSUMPTION:	12V DC, 2A
OPERATING TEMPERATURE:	0° to +40°C (32° to 104°F)
STORAGE TEMPERATURE:	–40° to +70°C (–40° to 158°F)
HUMIDITY:	10% to 90%, RHL non-condensing
DIMENSIONS:	21.5cm x 16.3cm x 4.4cm (8.5in x 6.4in x 1.7in) W, D, H
WEIGHT:	0.9kg (1.98lbs) approx.
ACCESSORIES:	Power supply, RC-IR3 infrared remote control transmitter
OPTIONS:	HDMI/HDMI male to male cables, RK-1 19" rack adapter

## 8 Default Communication Parameters

[Table 4](#) lists the default communication parameters for the **VM-114H4C**.

*Table 4: Default Communication Parameters*

RS-232	
Protocol 2000	
Baud Rate:	9600
Data Bits:	8
Stop Bits:	1
Parity:	None
Command Format:	HEX
Example (Output 1 to Input 1):	0x01, 0x81, 0x81, 0x81

<sup>1</sup> Specifications are subject to change without notice

9     **Default EDID**

The factory default EDID is listed below.

```
Monitor
Model name..... VM114H4C
Manufacturer..... KRM
Plug and Play ID..... KRM0114
Serial number..... 505-707455010
Manufacture date..... 2009, ISO week 10
-----
EDID revision..... 1.3
Input signal type..... Digital
Color bit depth..... Undefined
Display type..... RGB color
Screen size..... 520 x 320 mm (24.0 in)
Power management..... Standby, Suspend, Active off/sleep
Extension blocs..... 1 (CEA-EXT)
-----
DDC/CI..... n/a

Color characteristics
Default color space..... Non-sRGB
Display gamma..... 2.20
Red chromaticity..... Rx 0.674 - Ry 0.319
Green chromaticity..... Gx 0.188 - Gy 0.706
Blue chromaticity..... Bx 0.148 - By 0.064
White point (default).... Wx 0.313 - Wy 0.329
Additional descriptors... None

Timing characteristics
Horizontal scan range.... 30-83kHz
Vertical scan range..... 56-76Hz
Video bandwidth..... 170MHz
CVT standard..... Not supported
GTF standard..... Not supported
Additional descriptors... None
Preferred timing..... Yes
Native/preferred timing.. 1280x720p at 60Hz (16:10)
Modeline..... "1280x720" 74.250 1280 1390 1430 1650 720 725 730 750 +hsync +vsync

Standard timings supported
720 x 400p at 70Hz - IBM VGA
640 x 480p at 60Hz - IBM VGA
640 x 480p at 75Hz - VESA
800 x 600p at 60Hz - VESA
800 x 600p at 75Hz - VESA
1024 x 768p at 60Hz - VESA
1024 x 768p at 75Hz - VESA
1280 x 1024p at 75Hz - VESA
1280 x 1024p at 60Hz - VESA STD
1600 x 1200p at 60Hz - VESA STD
1152 x 864p at 75Hz - VESA ST
```

10    **Kramer Protocol 2000**

This RS-232 communication protocol uses four bytes of information as defined below. The default data rate is 9600 baud, with no parity, 8 data bits and 1 stop bit.

*Table 5: Protocol Definitions*

MSB		LSB					
	DESTI- NATION	INSTRUCTION					
0	D	N5	N4	N3	N2	N1	N0
7	6	5	4	3	2	1	0

1st byte

INPUT							
1	I6	I5	I4	I3	I2	I1	I0
7	6	5	4	3	2	1	0

2nd byte

OUTPUT							
1	O6	O5	O4	O3	O2	O1	O0
7	6	5	4	3	2	1	0

3rd byte

MACHINE NUMBER							
1	OVR	X	M4	M3	M2	M1	M0
7	6	5	4	3	2	1	0

4th byte

1<sup>st</sup> BYTE: Bit 7 – Defined as 0.

D – “DESTINATION”: 0 - for sending information to the switchers (from the PC);

1 - for sending to the PC (from the switcher).

N5...N0 – “INSTRUCTION”

The function that is to be performed by the switcher(s) is defined by the INSTRUCTION (6 bits). Similarly, if a function is performed via the machine’s keyboard, then these bits are set with the INSTRUCTION NO., which was performed. The instruction codes are defined according to the table below (INSTRUCTION NO. is the value to be set for N5...N0).

2<sup>nd</sup> BYTE: Bit 7 – Defined as 1.

I6...I0 – “INPUT”.

When switching (ie. instruction codes 1 and 2), the INPUT (7 bits) is set as the input number which is to be switched. Similarly, if switching is done via the machine’s front-panel, then these bits are set with the INPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

3<sup>rd</sup> BYTE: Bit 7 – Defined as 1.

O6...O0 – “OUTPUT”.

When switching (ie. instruction codes 1 and 2), the OUTPUT (7 bits) is set as the output number which is to be switched. Similarly, if switching is done via the machine’s front-panel, then these bits are set with the OUTPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

4<sup>th</sup> BYTE: Bit 7 – Defined as 1.

Bit 5 – Don’t care.

OVR – Machine number override.

M4...M0 – MACHINE NUMBER.

Used to address machines in a system via their machine numbers. When several machines are controlled from a single serial port, they are usually configured together with each machine having an individual machine number. If the OVR bit is set, then all machine numbers will accept (implement) the command, and the addressed machine will reply.

For a single machine controlled via the serial port, always set M4...M0 = 1, and make sure that the machine itself is configured as MACHINE NUMBER = 1.

Table 6: Instruction Codes for Protocol 2000

Note: All values in the table are decimal, unless otherwise stated.

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
1	SWITCH VIDEO	Set equal to video input which is to be switched (0 = disconnect)	Set equal to video output which is to be switched (0 = to all the outputs)	2
61	IDENTIFY MACHINE	1 - video machine name 3 - video software version 9 - protocol 2000 version	0 - Request first 4 digits 1 - Request first suffix 2 - Request second suffix 3 - Request third suffix 10 - Request first prefix 11 - Request second prefix 12 - Request third prefix	13

## Kramer Protocol 2000

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
62	DEFINE MACHINE	1 - number of inputs 2 - number of outputs	1 - for video 2 - for audio	14

NOTES on the above table:

NOTE 2 - These are bi-directional definitions. That is, if the switcher receives the code, it will perform the instruction; and if the instruction is performed (due to a keystroke operation on the front panel), then these codes are sent. For example, if the HEX code

01            85            88            83

was sent from the PC, then the switcher (machine 3) will switch input 5 to output 8. If the user switched input 1 to output 7 via the front panel keypad, then the switcher will send HEX codes:

41            81            87            83

to the PC.

When the PC sends one of the commands in this group to the switcher, then, if the instruction is valid, the switcher replies by sending to the PC the same four bytes that it was sent (except for the first byte, where the DESTINATION bit is set high).

NOTE 13 - This is a request to identify the switcher/s in the system. If the OUTPUT is set as 0, and the INPUT is set as 1, 2, 5 or 7, the machine will send its name. The reply is the decimal value of the INPUT and OUTPUT. For example, for a 2216, the reply to the request to send the audio machine name would be (HEX codes):

7D            96            90            81 (i.e. 128dec+ 22dec for 2nd byte, and 128dec+ 16dec for 3rd byte).

If the request for identification is sent with the INPUT set as 3 or 4, the appropriate machine will send its software version number. Again, the reply would be the decimal value of the INPUT and OUTPUT - the INPUT representing the number in front of the decimal point, and the OUTPUT representing the number after it. For example, for version 3.5, the reply to the request to send the version number would be (HEX codes):

7D            83            85            81 (i.e. 128dec+ 3dec for 2nd byte, 128dec+ 5dec for 3rd byte).

If the OUTPUT is set as 1, then the ASCII coding of the lettering following the machine's name is sent. For example, for the VS-7588YC, the reply to the request to send the first suffix would be (HEX codes):

7D            D9            C3            81 (i.e. 128dec+ ASCII for "Y"; 128dec+ ASCII for "C").

NOTE 14 - The number of inputs and outputs refers to the specific machine which is being addressed, not to the system. For example, if six 16X16 matrices are configured to make a 48X32 system (48 inputs, 32 outputs), the reply to the HEX code

3E            82            81            82 (ie. request the number of outputs)

would be HEX codes

7E            82            90            82

ie. 16 outputs

## LIMITED WARRANTY

The warranty obligations of Kramer Electronics for this product are limited to the terms set forth below:

### What is Covered

This limited warranty covers defects in materials and workmanship in this product.

### What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

### How Long Does this Coverage Last

Seven years as of this printing; please check our Web site for the most current and accurate warranty information.

### Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

### What Kramer Electronics will do

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

### What Kramer Electronics will not do Under This Limited Warranty

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

### How to Obtain a Remedy under this Limited Warranty

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, please visit our web site at [www.kramerelectronics.com](http://www.kramerelectronics.com) or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required. You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

### Limitation on Liability

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

### Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

### Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, please visit our Web site at [www.kramerelectronics.com](http://www.kramerelectronics.com) or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.



**For the latest information on our products and a list of  
Kramer distributors visit [www.kramerelectronics.com](http://www.kramerelectronics.com)  
where updates to this user manual may be found.  
We welcome your questions, comments and feedback.**



**Caution**

**Safety Warning:**

Disconnect the unit from the power supply before  
opening/servicing.



P/N: 2900-000645



Rev: 7



**Kramer Electronics, Ltd.**

Web site: [www.kramerelectronics.com](http://www.kramerelectronics.com)

E-mail: [info@kramerel.com](mailto:info@kramerel.com)

**P/N: 2900-000645 REV 7**